




# INSTALLATION INSTRUCTIONS

## DECORA SHADE

### 1. MOUNT THE BRACKETS

Determine the proper position for each bracket. The outside brackets should be no further than 2" from the ends of the Decora cassette. The brackets should be securely mounted and equally spaced for the width of the Decora Shade. All screws should be securely fastened to a sturdy structure. It is important that the brackets be mounted level and aligned to each other. Shimming may be required. Attach using two screws.

**NOTE:** The standard mounting brackets provided are as follows: 2 for widths up to 60", 3 between 61" to 96", 4 or more over 96".

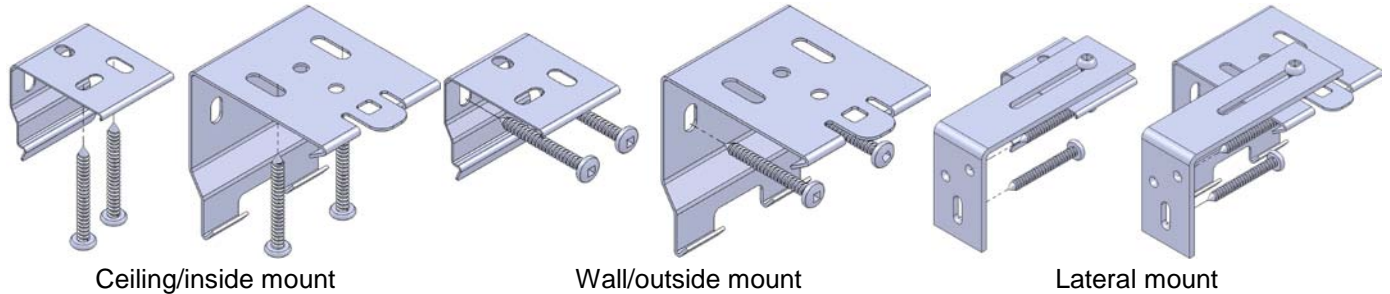

Ceiling/inside mount

Wall/outside mount

Lateral mount


### 2. INSTALL THE SHADE

With the curved face of the cover facing you, insert the front edge of the headrail onto the top of each mounting bracket, as shown in figure below.


Starting from the center, push upward and back until the back edge of the decora cover snaps into the bottom tab of the mounting bracket.

Repeat this process for each bracket.

Make sure that the lip of the mounting bracket firmly clicks into the groove.

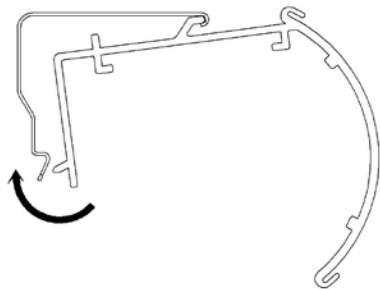

Decora 8 mounting

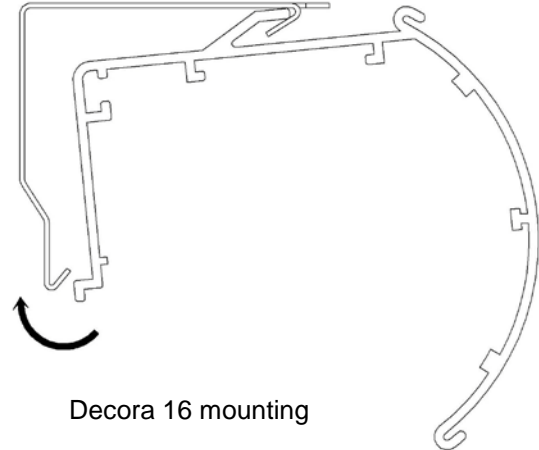

Decora 16 mounting

### 3. OPERATE THE SHADE

For manually chain operated shades, use the control chain to lower or raise the fabric to insure a proper installation. Do not lift the bottom rail with your hand.

For manual chainless shades such as NeoShade™, gently pull the bottom bar to lower or raise the shade. Also, be careful not to place objects on the window sill that will interfere with operating the shade or cause it to hang unevenly. For automatic shades, use the remote to raise and lower the shade. Lift and lower the shade several times to confirm a proper installation. Adjust if necessary.

For programming the remote see "Programming Instructions" for remote and wall switches.

### 4. TO REMOVE THE SHADE

From the bottom rear of the Decora cassette insert a flathead screw driver in between the cassette and release tab. Gently twist the screwdriver and pry open the bracket.