



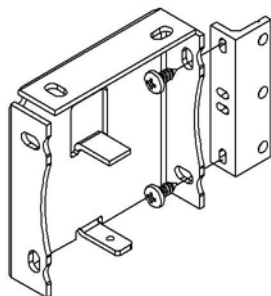


# INSTALLATION INSTRUCTIONS

## CLEAR VIEW™


- Tracks (1) are a standard size of 46 ½". They should be installed at the top of the window to the desired length. If the tracks are too long, they can be shortened by lightly scoring a line at the desired length and snapping off the excess piece.
- Slide the insert bar (5) and the stopper (7) inside the tracks (1). The ball thumb screws (6) are threaded to correspond to left and right, so be sure to keep the parts together for each side.
- Locate and mark the position for tracks where the brackets for the window coverings would normally be. Check the alignment for proper functioning of the shade.
- Remove the protective film covering of the adhesive tape and press the track gently into place. Be sure the labeled track is on the right side.
- For inside mount choose the appropriate offset brackets for your application:
  - Offset brackets (2) for Decora, CBX, Neo Shade, Roman Shades, Mini Blinds, Cellular Shades, Wood Shade
  - Offset brackets (3) for Open Roll, Fascia, Skyline
 Secure the offset bracket to the insert bar (5) using the small screw provided (4). Ensure that the insert bar's ridge fits firmly with the bracket's groove.  
 For outside mounting the brackets will be secured directly to the inside bar (5).

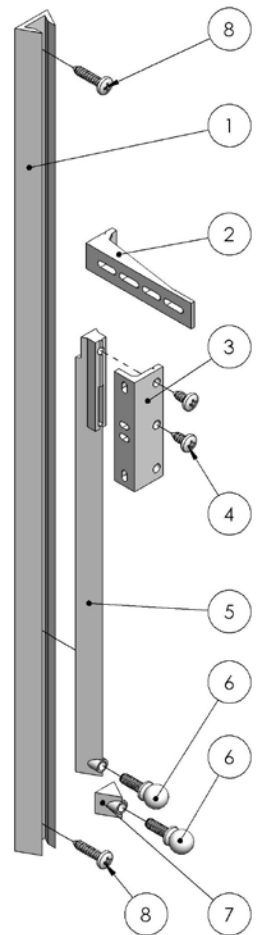


Fascia bracket

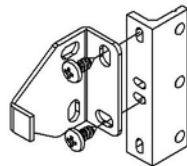


Open roll bracket

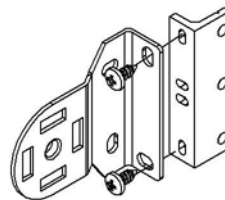


Skyline bracket

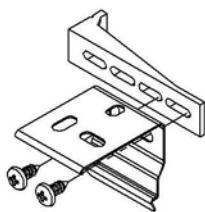

Decora/Roman bracket

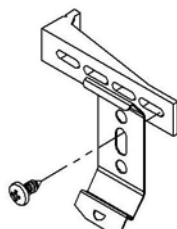

Neo Shade™ bracket

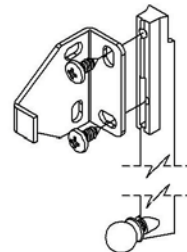

Outside mounting

- Install the window treatment in the normal manner.
- Test the correct operation of the assembly. If placement of the unit is correct, press the track firmly into place. Use the long screws provided (8) in the top and bottom holes of the track to secure it into the frame.
- Move the shade to the desired position and tighten the ball thumb screws (6) at the bottom of insert bar (5). The extra stopper (7) is provided to be used if a set lower position is desired. When put in place, the thumb ball screw, as part of the insert bar does not require tightening.

**NOTE:** Optimal for shades up to 50" wide. For extra high shades, two insert bars (5) can be used.